



钉装说明书 size: 105X148MM

FCC Caution.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If the equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help.

*R1 warning for Mobile device:
This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

(READ AND FOLLOW ALL SAFETY INSTRUCTIONS)

Holiday showhome™

Quick Start Guide

Scan code to view product details and feature video.

www.ishowtree.com

封底

封面

Instructions for use

1. Notes before use.

Holiday Showhome is the most advanced way to control all your lights. Easily switch between colors and lighting effects. Combine colors with lighting effects and find the setting that works best for you.

- Smart device must be compatible with Bluetooth 4.0 or above.
- Android 5.0 or above.
- IOS 8.0 or above.

2. How to control your Bluetooth devices with APP?

a. Download the "Holiday Showhome" App from App Store (iOS) or Google Play (Android)

Alternatively you can directly scan the QR code below to download:

(Android)

(IOS)

1

Instructions for use

b. Open the "Holiday Showhome" App and sign in.

Notes: You can also click the Skip button to skip the login screen and use the visitor mode.

2

c. Click the Add Device Button and select the Bluetooth device, then click the Scan button

3

Instructions for use

d. Click the Quickly add button after the scan is complete

4

e. Return to the home interface and click on the device or the mobile phone icon in the upper right corner to enter the operation interface.

5

f. Now you have entered the operation interface as below.

5

Instructions for use

Click the icon to enter the control interface of the corresponding product.

Product list. You can click on a product and control it separately

You can set the chasing mode here. (Only support C9 Lights and Icicles, or LED Lights Strip)

6

Instructions for use

3. More information about the Holiday Showhome products.

product parameters:

No.	Product Name	Picture	SKU NO.	Describe
1	C9 Light 24L		(In store) 100439222 (On line) 1004213748	
2	C9 Light 48L		(In store) 100436392 (On line) 1004213752	
3	Icicle Light 24L		(In store) 100439217 (On line) 1004213747	
4	Icicle Light 48L		(In store) 100436393 (On line) 1004213754	
5	RGB 10FT Rope Light		(In store) 100439210 (On line) 1004213751	
6	RGB 25FT Rope Light		(In store) 100439231 (On line) 1004213753	

7

Instructions for use

product parameters:

No.	Product Name	Picture	SKU NO.	Describe
7	Candy Cane		(In store) 100439222 (On line) 1004213750	
8	RGB Show Tree		(On line) 1004213752	Function: 1. RGB Lights 2. Timer 3. Function: 29 kinds of theme colors Standard: 10 kinds of patterns 3 kinds of theme shows selected 4. with APP-Bluetooth Smart controlled control distance: >50m
9	RGB LED Spotlight		(In store) 100439200 (On line) 1004213747	5. with auto setting string lights illuminate sequentially 6. Multiple color/Super brightness 7. Control over 100 sets synchronized Standard / Approval: FCC / UL / Bluetooth Certified

8

Instructions for use

4. Share with your family members or friends.

The app shares the device by scanning the QR code so that your family members or friends only need to scan the automatically generated QR code in your app to complete the addition of all devices. The specific operations are as follows:

⚠️ Note: To use this feature, you must allow the app to have access to the camera.

a. Open your app and click the Account icon.

9

Instructions for use

b. Click the Sharing option.

10

Important Safety Instructions

When using electrical products, basic precautions should always be followed including the following:

- Read and following all safety instructions.
- Do not use seasonal products outdoors unless marked suitable for indoor and outdoor use. When products are used in outdoor applications, connect the product to a Ground Fault Circuit Interrupting (GFCI) outlet, if one is not provided, contact a qualified electrician for proper installation.
- This seasonal use product is not intended for permanent installation or use.
- Do not mount or place near gas or electric heaters, fireplaces, candles or other similar sources of heat.
- Do not secure the wiring of the product with staples or nails, or place on sharp hooks or nails.
- Do not let lamps rest on the supply cord or on any wire.
- Unplug the product when leaving the house, when retreating for the night, or if left unattended.
- This is an electric product-not a toy! To avoid risk of fire, burns, personal injury and electric shock, it should not be played with or placed where small children can reach it.
- Do not use this product for other than its intended use.
- Do not hang ornaments or other objects from cord, wire, or light string.
- Do not close doors or windows on the product or extension cords as this may damage the wire insulation.
- Do not cover the product with cloth, paper or any material not part of the product when in use.
- This product employs overload protection (fuse). A blown fuse indicates and overload situation. If the fuse blows, unplug the product from the outlet. Also unplug any additional things or products that may be attached to the product. Replace the fuse as per the user servicing instructions. Follow product marking for proper fuse rating and check the product. If the replacement fuse blows, a short-circuit may be present and the product should be discarded.
- Read and follow all instructions that are on the product or provided with the product.
- Save these instructions.

Important Safety Instructions

Use and Care Instructions:

- When the product is placed on a live tree, the tree should be well maintained and fresh. Do not place on live trees in which the needles are brown or break off easily. Keep the tree holder filled with water.
- If the product is placed on a tree, the tree should be well secured and stable.
- Before using or reusing, inspect product carefully. Discard any products that have cut, damaged, or frayed wire insulation or cords, cracks in the transformers or enclosures, loose connectors, connections, and wires.
- When storing the product, carefully remove the product from wherever it is placed, including trees, branches, or bushes, to avoid any undue strain or stress on the product conductors, connections, and wires.
- When not in use, store neatly in a cool, dry location protected from sunlight.

User Servicing Instructions:

Replace the fuse.

- Grasp plug and remove from the receptacle or other outlet device. Do not unplug by pulling it.
- Open fuse cover. Slide open fuse access cover on top of attachment plug towards blades.
- Remove fuse carefully.
- Risk of fire. Replace fuse only with 3 Amp, 125 Volt fuse (provided with product).
- Close fuse cover. Slide closed the fuse access cover on top of attachment plug.
- Risk of fire. Do not replace attachment plug. Contains a safety device (fuse) that should not be removed. Discard product if the attachment plug is damaged.

If connecting to a lighting string that does not have a wattage (W) rating (found on the tag with 4 inches of the plug), calculate the wattage as follows: Multiply the current (A) which is on the tag-type tag by 120.

For example: lighting string (rated 120V, 40Hz, 0.2 Amps, 0.27120x2 Watts. Add the wattage of each light string together for a total of 216 Watts or less. (Do not exceed 216 Watts)

CAUTION

- To reduce the risk of fire or electric shock, do not attempt to replace lamps or modify string.
- To reduce the risk of fire and electric shock: a) Do not install on trees having needles/leaves or branch coverings of metal or materials which look like metal, and b) Do not mount or support strings in a manner that can cut or damage wire insulation.

Model No.: SL91A, SL91-48A, SL91B, SL91-48B, AL93, AL92A