

ROPE LIGHTS 3M
Instruction Manual

Troubleshooting

? A controller and adapter can connect up to three 3M Rope lights. If you have been connect more than three, the following problems may been cause.

- The Rope lights behind the third will not light up
- The brightness of the Rope lights will decrease
- The Rope Lights will not light up


? If the Rope lights does not light up for a long time in some modes, you need to press the button and hold for 6 seconds until the green lights flash three times.

? If you purchased a 6M Rope lights for connecting, you can use it as two connected 3M Rope lights.



Scan & See Me!
www.ishowtree.com


Package contents and specification

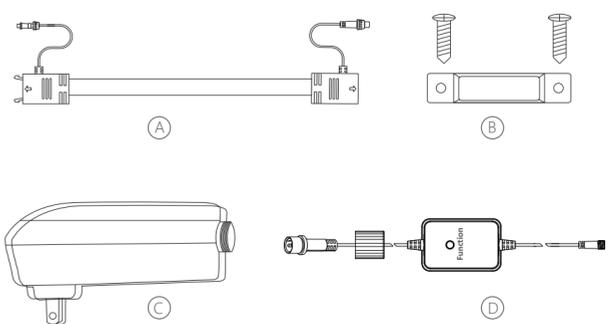


PART	DESCRIPTION	QUANTITY
A	Rope lights 3M	1
B	Securing clip	13
C	Adapter	1
D	Controller	1

Specification
INPUT: 120V ~ 60Hz, 0.64A
OUTPUT: DC24V 1.5A
OPERATION: Indoor/Outdoor
OPERATING TEMPERATURE: -15° F TO 90° F (-26° C TO 32° C)
WARRANTY: One Year Limited

Installation notes

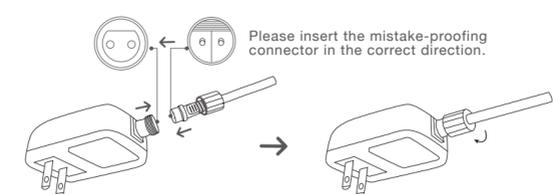- Controller connection adapter as shown

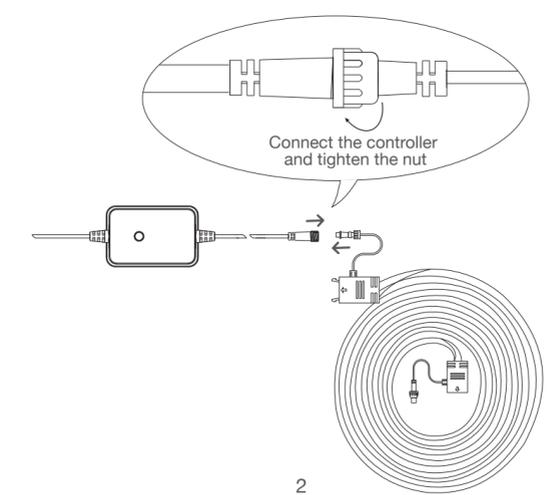
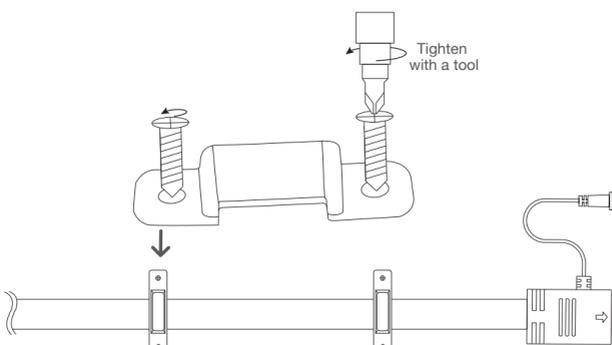
Please insert the mistake-proofing connector in the correct direction.
- The controller is connected Rope lights at the other end


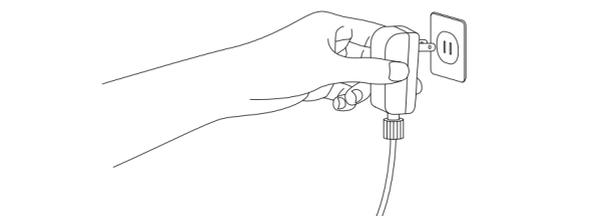
Connect the controller and tighten the nut

封面

封底


Installation notes

- Fix the Rope lights to the wall


Tighten with a tool
- Connect the power adapter to the power supply


Controller operation and connecting instructions


- When you press the Function button, 8 kinds of modes and themes will come out.

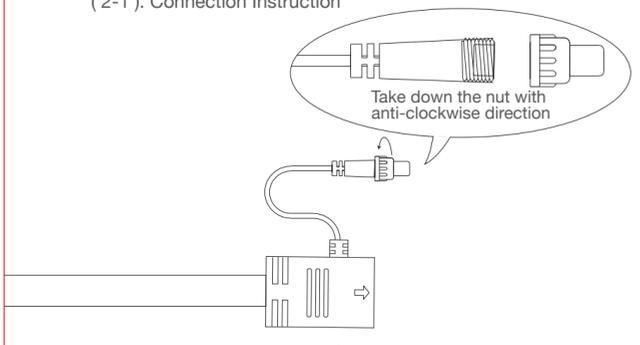	Modes and themes
1	OFF
2	Christmas day show 1
3	Valentines' day show 1
4	Independence day show 1
5	Thanks giving day show 2
6	St. patrick's day show 2
7	Halloween show 3
8	Multi-color show 3
- When you purchase 2 sets Rope lights or more, you can make seamless joint by the following steps:
(2-1). Connection Instruction


Take down the nut with anti-clockwise direction

Controller operation and connecting instructions

Please insert the mistake-proofing connector in the correct direction.

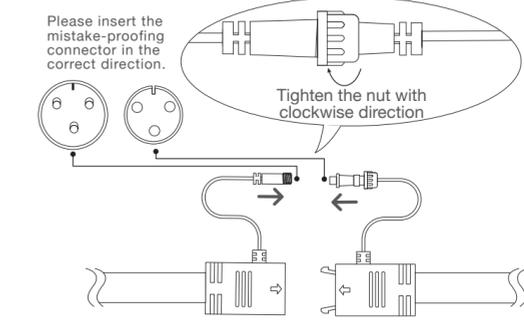

Tighten the nut with clockwise direction

(2-2). Connect 3 sets at most (As shown in figure 2-2):

(2-3). After connection done, press function button to change the length of the rope lights


- After connected another Rope lights successfully, you should press and hold the function button for 3 seconds until it lights up
- When you want to reset the length of the Rope lights to one set, you should press and hold the function button for 6 seconds, until the Rope lights flash green lights 3 times.

Note: If other Rope lights have been connected behind, it will be turn off after reset operation.

(2-4). If you buy more than three Rope lights and want to connect together, you need to add more controller and adapter to achieve this. The connecting operation is shown in the figure below. Please refer to the APP manual for specific operations. (As shown in figure2-4):

Controller operation and connecting instructions

2-2

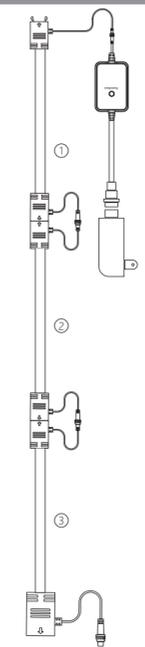

2-4

