


Item # 1000007236 Model # W12L0569

USE AND CARE GUIDE

3 ft White Sparkling Tinsel Twinkle Snowflake

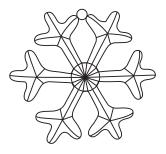

THANK YOU

We appreciate the trust and confidence you have placed in Home Accents through the purchase of this White LED Snowlists. We strive to confinately create quality products designed to enhance your home. Valid us online to see our full line of products available for your home improvement needs. Thank you for choosing Home Accental

Safety Information

IMPORTANT SAFETY INSTRUCTIONS

When using electrical products, basic precautions should always be followed. Please read and follow all safety instructions prior to use.

READ AND FOLLOW ALL SAFETY INSTRUCTIONS.

- Do not use seasonal products outdoors unless marked suitable for indoor and outdoor use.
 When products are used for outdoor applications, connect the product to a Ground Fault Circuit Interruption (GFCI) outlet. If one is not provided, contact a qualified electrician for proper installation.
- This seasonal-use product is not intended for permanent installation or use.
- Unplug the product when leaving the house, when retiring for the night, or if left unattended.
- Do not use this product for other than its intended purpose.
- Do not hang ornaments or other objects from cord, wire, or light string.
- Do not let the lamps rest on the supply cord or on any wire.
- This product is equipped with push-in type lamps. Do not twist the lamps.
- This product employs overload protection (fuse). A blown fuse indicates an overload or short-circuit situation. If the fuse blows, unplug the product from the outlet. Also, unplug any additional strings or products that may be attached to the product. Replace the fuse as per the instructions listed in this manual (follow product marking for proper fuse rating), and check the product. If the replacement fuse blows, a short-circuit may be present and the product should be discarded.

SAVE THESE INSTRUCTIONS.



Pre-Assembly

PLANNING ASSEMBLY


Carefully remove all the parts from the box, and place them on a fat surface. Read the entire manual prior to assembly, and identify all the parts included in the package against the parts list. If any parts are missing or damaged, do not attempt assembly, but contact our customer service center.

HARDWARE INCLUDED



Part	Description	Quantity
BB	Fuse	2
CC	Replacement Bulb	4

 PACKAGE CONTENTS



Part	Description	Quantity
A	Snowflake	1

n

Assembly

Assembly

Finishing Assembly

☐ Hang the Snowflake on the wall or other proper

□ Connect the power cords to a GFCI power

Assembling the Snowflake

Unfold the Snowflake (A).



Maintenance



REPLACING FUSES

- Grasp the plug and remove from the receptacle or other outlet device. Do not unplug by pulling on the cord.
- Open the fuse compartment by sliding the fuse access cover on the plug towards the blades, as shown.
- Carefully remove the fuse(s), and replace with the fuse(s) (BB) provided.
- □ Close the fuse compartment. .

REPLACING BULBS

- Grasp the plug and remove from the receptacle or other outlet device. Do not unplug by pulling on the cord.
- □ Unlock the burned out LED bulb by lifting the hook and pulling both the bulb and plastic base straight out of the bulb holder. Do not twist bulbs.
- Pull the old bulb and plastic base straight out of the lamp holder.
- Remove the bulb from the plastic base by straightening the bulb wires and pulling the bulb out.
- Insert the wires of the replacement bulb (CC) down through the plastic base, and press the bulb (CC) into the base. Bend the wires upward
- Insert the replacement bulb (CC) and base into the socket. Do not twist.
- □ Lock the LED bulb.

Care and Cleaning

- When finished with use, carefully remove the product from it's location, including trees, branches, or bushes. This helps to avoid any undue strain or stress on the product conductors, connections, and wires.
- If the product is placed on a tree, the tree should be well maintained, well secured, and stable.
- Wipe the unit with a damp cloth and allow the unit to dry before storing. Store the product neatly in a cool, dry location protected from sunlight.

UL Model No. L-092S



Questions, problems, missing parts? Before returning to the store, call Home Accents Holiday Customer Service 8 a.m.-6 p.m., EST, Monday-Friday

1-877-527-0313

HOMEDEPOT.COM