



7.5FT 800L STARLIN SLIM MICRO DOT LED COLOR CHANGING 8 FUNCTION ONE PLUG

SKU# 1004363928

Safety Information

IMPORTANT SAFETY INSTRUCTIONS


When using electrical products, basic precautions should always be followed including the following:

- a) **READ AND FOLLOW ALL SAFETY INSTRUCTIONS.**
- b) This product is for indoor use only. The electrical rating 0.25 A 120 V 60 Hz.
- c) Do not use seasonal products outdoors unless marked suitable for indoor and outdoor use. When products are used in outdoor applications, connect the product to a Ground Fault Circuit Interrupting (GFCI) outlet. If one is not provided, contact a qualified electrician for proper installation.
- d) This seasonal use product is not intended for permanent installation or use.
- e) Do not mount or place near gas or electric heaters, fireplace, candles or other similar sources of heat.
- f) Do not secure the wiring of the product with staples or nails, or place on sharp hooks or nails.
- g) Do not let lamps rest on the supply cord or on any wire.
- h) Unplug the product when leaving the house, or when retiring for the night, or if left unattended.
- i) This is an electric product – not a toy! To avoid risk of fire, burns personal injury and electric shock it should not be played with or placed where small children can reach it.
- j) Do not use this product for other than its intended use.
- k) Do not hang ornaments or other objects from cord, wire, or light string.
- l) Do not close doors or windows on the product or extension cords as this may damage the wire insulation.
- m) Do not cover the product with cloth, paper or any material not part of the product when in use.
- n) Read and follow all instructions that are on the product or provided with the product.
- o) **SAVE THESE INSTRUCTIONS.**

Pre-Assembly

Package Contents


<p>A. Tree top Qty: 1</p> 	<p>B. Tree center Qty: 1</p> 	<p>C. Tree bottom Qty: 1</p> 
<p>D. Stand with an eye bolt Qty: 1</p> 	<p>E. Power cord Qty: 1</p> 	<p>F. Remote control Qty: 1</p> 

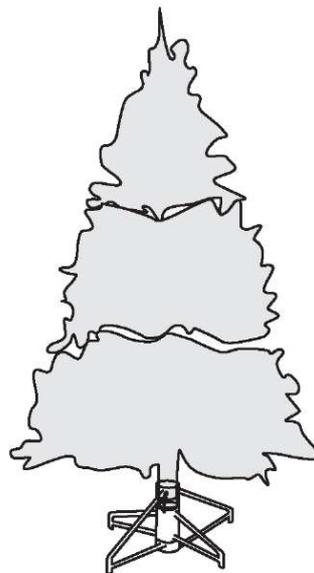

Assembly

Assembling the tree stand

- Step 1. Choose a location near a wall outlet.
- Step 2. Open the stand to a 90 degree angle until the hole lines up with the hole on the tube.
- Step 3. Screw an eye bolt into the hole.

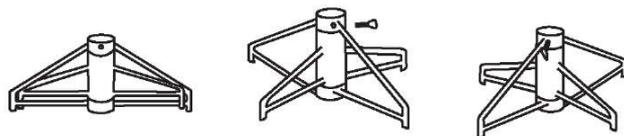


CAUTION! – ALWAYS UNPLUG YOUR TREE FROM ITS POWER SOURCE BEFORE ASSEMBLING OR DISASSEMBLING.

Assembling the tree

Please remove protective covers from the base of the pole for each tree section before assembling.

- Step 1. Carefully insert bottom section (C) of tree into tree base and tighten the screw. (See Fig. 1)
- Step 2. Insert the middle section (B) of the tree into the bottom section (C). (See Fig. 2)
- Step 3. Insert the top section (A) into the middle section (B). (See Fig. 3)
- Step 4. Connect the end connector of power cord with foot pedal switch (E) with the connector found on the bottom section (C) in correct direction (always match the protuberance on the end connector of power cord to the concave on the connector found on the bottom section (C) according to the magnified drawing. (See Fig. 4)
- Step 5. Allow branches to fall into place or gently pull branches up and out. When adjusting branches be sure that all wires are free of branch hinges. (See Fig. 5)
- Step 6. Shape the branches. Starting with tips closest to the pole, shape one tip to the right, one to the left and one at the center of the main stem. Repeat pattern for each branch. (See Fig. 6)
- Step 7. Plug the well-connected power cord from the tree section (C) into a proper outlet.

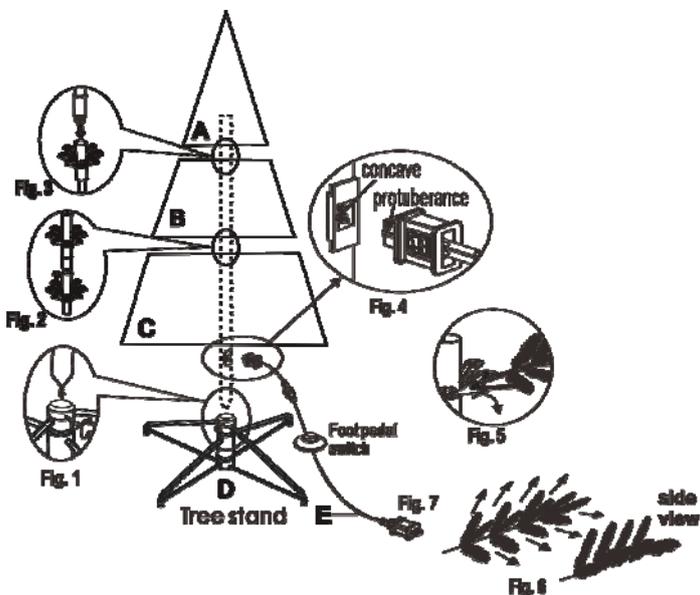

Step 8. Please note this tree comes with a foot pedal switch and a remote control for easy illumination and changing functions. This tree is Color Changing, the 8 lighting options available are:

1. Steady Warm White
2. Flashing Warm White
3. Fade In and Fade Out Warm White
4. Steady Multicolor
5. Flashing Multicolor
6. Fade In and Fade Out Multicolor
7. Sequential Multicolor & Warm White
8. Color Changing

These functions can be changed by pressing the foot pedal switch or using the remote control. Please see the instructions of remote control below.


Operation

Turning on the tree

- Step 1. Plug the well-connected power cord from the tree section (C) into a proper outlet.
- Step 2. Press the remote control or foot pedal switch to choose functions.

Instructions of Remote Control

Please note this tree has a remote control. Please pull out the insulation tape from the remote control, before starting to use it.

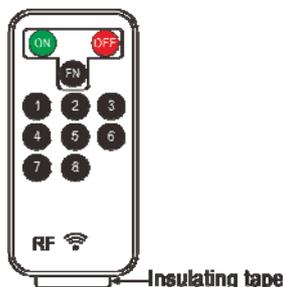

1. Press Fn button, the function below cycle. Press the number key, select from the following corresponding lighting functions:

- Function 1: Steady Warm White
- Function 2: Flashing Warm White
- Function 3: Fade In and Fade Out Warm White
- Function 4: Steady Multicolor
- Function 5: Flashing Multicolor
- Function 6: Fade In and Fade Out Multicolor
- Function 7: Sequential Multicolor & Warm White
- Function 8: Color Changing



If the remote control does not work, check whether the battery of the remote control is out of power.

To replace the remote control battery:

1. Replace with a new button cell "CR2025" (3 volt) into the compartment.

CAUTION: DO NOT DISPOSE OF BATTERIES IN FIRE. BATTERIES MAY EXPLODE OR LEAK.



CAUTION: The product consists of non-replaceable LED lamps. To reduce the risk of fire or electric shock, do not attempt to replace lamps or modify string.

Care and Cleaning

- Step 1. Remove all ornaments and decorations.
- Step 2. Unplug the cord from the wall outlet and then disconnect each section of the tree. Remove the power cords from the tree bottom (C).
- Step 3. Gently lift the tree top straight up to remove from the center section and fold all branches towards the pole.
- Step 4. Repeat this step for the center and bottom tree sections.
- Step 5. Carefully place all tree sections into a shipping box and tape it shut.
- Step 6. Store your tree in a cool, dry place away from sunlight.

Troubleshooting

Problem	Solution
The tree does not light	Ensure that all tree sections are connected into each other well by pressing each section down and rotating. Ensure that the power cord is plugged into the hole of the connector found on the tree bottom (C). Make sure power cord plug is securely inserted into a working electrical outlet.
	If you are still experiencing problems with the tree please call 1-877-527-0313 for instructions.

Warning: Please note that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Adapter Model No. TS-12W12V