

# 6' Boulder Mountain Pine Clear

MODEL NO: U11G603A-024-01  
(WL-017)

## ASSEMBLY INSTRUCTIONS

**PRODUCT CODE:  
140-034067-074**

**CAUTION:  
Carefully Read  
Instructions and  
Procedures for  
Safe Operation**

### Receipt of Purchase:

Questions, problems, or missing parts?  
Before returning to place of purchase,  
please contact us at 866-210-5958.  
7 am - 9 pm, CST, Monday-Friday.  
Willis Electric customer service  
representatives will be glad to assist  
you.

**UPC CODE:  
030539015404**



Attach Here



# ASSEMBLY INSTRUCTIONS

1. Before you start to assemble your tree, place the tree stand (E) on a level surface.
2. Assemble tree stand according to the assembly instruction for the tree stand.
3. Insert the bottom section (C) of the trunk into the assemble stand(E). (See Fig.1)
4. Insert the middle section (B) into the bottom section (C), top section (A) into the middle section (B). (See Fig.2, 3)
5. Insert the plug of the top section (A) into the end connector of the middle section (B), the plug of the middle section (B) into the end connector of the bottom section (C).(See Fig.5)
6. Open all the branches. (See Fig.4)


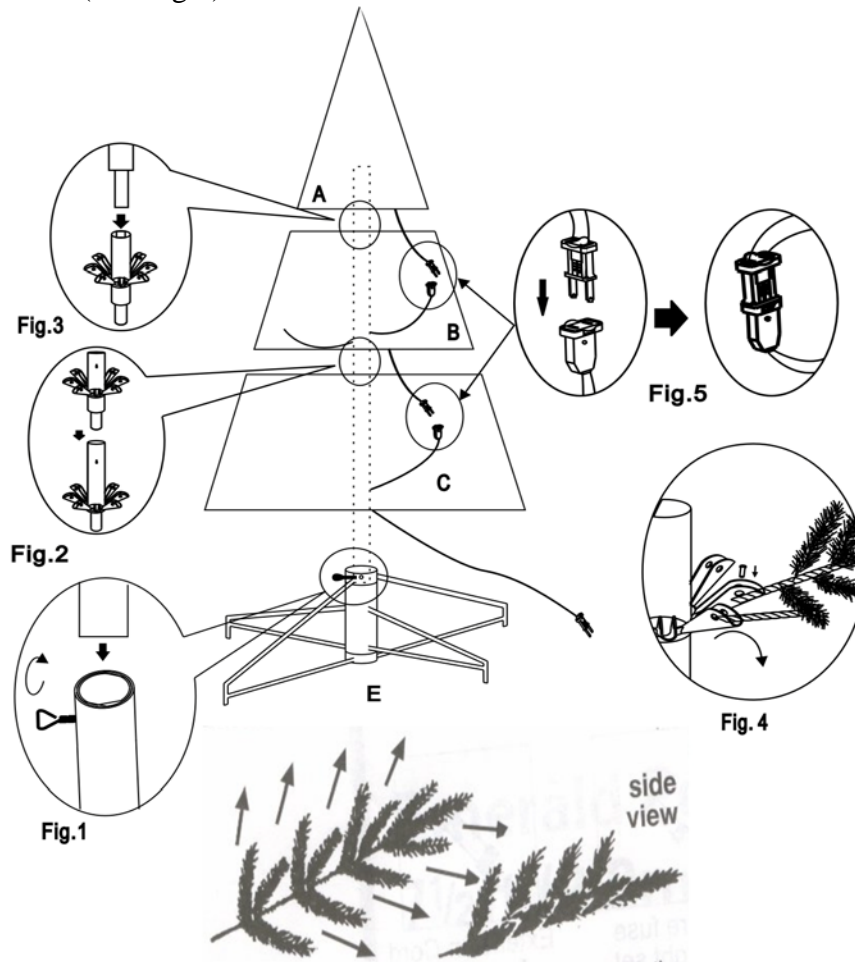


Fig. 6


7. Allow the branches to fall into place or gently pull branches up and out. When adjusting branches be sure that all wires are free of branch hinges. (See Fig.6)
8. Shape the branches. Starting with tips closest to the pole, shape one tip to the right, one to the left and one at the center of the main stem. Repeat pattern for each branch.
9. Connect the plug of the cord from bottom section (C) to the wall outlet. Now your tree should be completed with all lights illuminated. Your tree is ready to be decorated and enjoyed.

# ASSEMBLY INSTRUCTIONS FOR TREE STAND

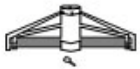


**Fig. 1**

1. Tree stand consists of a metal stand and a single eye bolt. (See Fig.1)

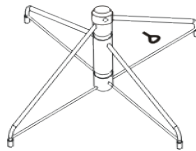


**Fig. 2**

2. Open the stand to a 90 degree angle until the hole lines up with the hole on the tube. (See Fig.2)

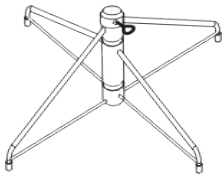

**Fig. 3**

3. Insert an eye bolt and screw into the hole. (See Fig.3)

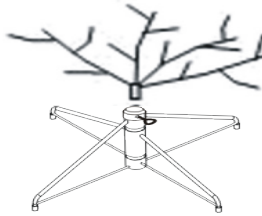

**Fig. 4**

4. Insert the tree into the stand and adjust accordingly. The tree should be straight and balanced correctly. (See Fig.4)

## IMPORTANT SAFETY INSTRUCTIONS

### READ AND FOLLOW ALL SAFETY INSTRUCTIONS

- a) Do not use seasonal products outdoors unless marked suitable for indoor and outdoor use. When products are used in outdoor applications, connect the product to a Ground Fault Circuit Interrupting (GFCI) outlet. If one is not provided, contact a qualified electrician for proper installation.
- b) This seasonal use product is not intended for permanent installation or use.
- c) Do not mount or place near gas or electric heaters, fireplaces, candles or other similar sources of heat.
- d) Do not secure the wiring of the product with staples or nails, or place on sharp hooks or nails.
- e) Do not let lamps rest on the supply cord or on any wire.
- f) Unplug the product when leaving the house, when retiring for the night, or if left unattended.
- g) This is an electric product – not a toy! To avoid risk of fire, burns, personal injury and electric shock it should not be played with or placed where small children can reach it.
- h) Do not use this product for other than its intended use.
- i) Do not hang ornaments or other objects from cord, wire, or light string.
- j) Do not cover the product with cloth, paper or any material not part of the product when in use.
- k) This product is equipped with push-in type lamps. Do not twist lamps.
- l) This product employs overload protection (fuse). A blown fuse indicates an overload or short-circuit situation. If the fuse blows, unplug the product from the outlet. Also unplug any additional strings or products that may be attached to the product. Replace the fuse as per the user servicing instructions (follow product marking for proper fuse rating) and check the product. If the replacement fuse blows, a short-circuit may be present and the product should be discarded.
- m) Read and follow all instructions that are on the product or provided with the product.

### SAVE THESE INSTRUCTIONS


#### TROUBLE SHOOTING (If Lights Do Not Work):

1. If entire tree does not light, make sure extension cord plug is securely inserted into a working electrical outlet.
2. Check whether all bulbs are tightly fixed inside the lamp holder.
3. If a bulb is blown or broken, replace the faulty bulb according to bulb replacement instructions below.
4. If the fuse in the light set plug or extension cord plug is blown, replace the blown fuse according to fuse replacement instructions below.
5. If you are still experiencing problems with the tree please call us.

**CAUTION! – ALWAYS UNPLUG YOUR TREE FROM ITS POWER SOURCE BEFORE ATTEMPTING EITHER FUSE OR BULB REPLACEMENT.**

**REPLACEMENT PARTS LIST**

Part	Description	Part #
A	Fuses	
B	Bulbs	

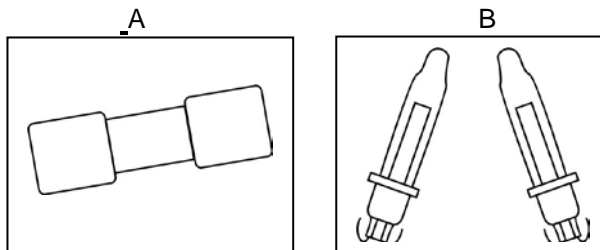

**FUSE REPLACEMENT**

This product comes with an overload protection (fuse). A blown fuse indicates an overload or short circuit. If a fuse blows, unplug tree from wall outlet. Replace the fuse as per the fuse replacement instructions below (follow product marking for proper fuse rating). If the fuse blows, a short circuit may be present and the product should be reviewed to determine the cause.

Light set fuse replacement (replaceable 3-amp 125V fuses are located in Spare parts bag)

1. Grasp plug and remove from its power source (Illustration.1).
2. Locate blown fuse(s) by sliding access cover on top of plug towards prongs.
3. Remove blown fuse(s) by turning the plug over. Fuses should fall into your hand (Gentle tapping may be required).
4. Replace blown fuse with spare replacement fuse. Close fuse cover by sliding fuse access cover towards the cord.


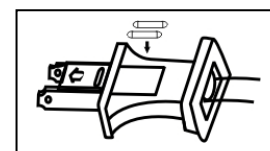


Illustration.1

**CAUTION:** To reduce risk of fire – replace fuse in tree plug with only 3-amp 125 volt fuse (Illustration.1). Do not replace attachment plug. Discard product if the attachment plug is damaged.

**BULB REPLACEMENT:**

1. Grasp plug and remove from its power source
2. Pull bulb AND plastic base straight out of socket. Do not twist bulbs.
3. Replace burned bulb with 2.5 volt, 0.425 watt bulb ONLY. (Additional bulbs are included for your convenience).

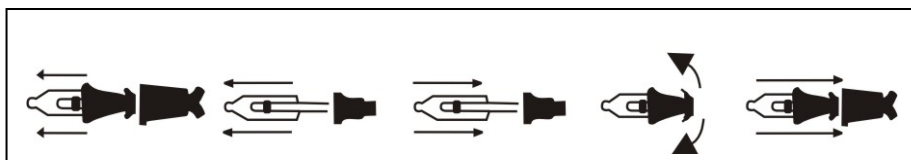

**BASIC PRECAUTIONS SHOULD BE FOLLOWED WHEN USING THIS PRODUCT:**

(Inspect product carefully before using or re-using):

1. This is an electrical product – not a toy! To avoid risk of fire, burns, personal injury and electrical shock it should not be played with.
2. Do not mount or place near gas or electric heaters, fireplaces, candles or other similar sources of heat.
3. Do not cover product with cloth, paper or any material when product is in use.
4. Do not hang ornaments or other objects from cord, wire, or light string. Hang ornaments only on the tree itself.
5. For your safety, unplug the product when leaving the house, retiring for the night, or if left unattended.
6. Do not let bulbs rest on the supply cord or on any wire.
7. Do not close doors or windows on the product or extension cords as this may damage the wire insulation.
8. Should you discover any of the following: a) cut, damaged, or frayed wire insulation; b) cracks in the sockets; c) loose connections or exposed wires, please call us.

**STORAGE:** When storing the product, carefully remove the product from wherever it is placed, including trees, branches, or bushes, to avoid any undue strain or stress on the product conductors, connections, and wires. Disassembled tree can be stored in its original box. Store tree in a cool dry place where the temperature does not exceed 100 degrees Fahrenheit.