 
 


## Checking Steps if Tree topper plug not working :

**PLEASE ALWAYS UNPLUG YOUR TREE FIRST BEFORE DO THE FOLLOWING STEPS**

1.If the whole section lights are not working, the issue might be caused by the poor connections between the sections.(as the below photo)  
Unplug the tree and unassemble the section A and start with this section.



3. Pull the four terminals of connector out a bit with tool(as below photos)  
4. Assemble the section back and plug in to see if it works.  
5.If it still does not work please do the same steps for the section B and C connectors.