 


# Incandescent Lights Checking Steps if entire section unlit :

**PLEASE ALWAYS UNPLUG YOUR TREE FIRST BEFORE DO THE FOLLOWING STEPS**

1. Find the connector of section have lights not working.



2. Push downward the point (red arrow point in the below photo) and pull out the connector buckle.

Re-insert it until hearing a click to see if it is a connector issue.

